

C-62

小ギア抜き

このたびはホーザン C-62 小ギア抜きをお買い上げいただき、まことにありがとうございます。この製品情報をよくお読みになり、正しくお使いください。また、お読みになったあとも大切に保管してください。



ご使用方法


● フリーホイールの取り外し

C-62を2丁ご用意ください。

2丁のC-62を図のようにセットします。

※ 裏表の向きが違ふことに注意してください。

2丁に同じ力をかけて矢印方向に回すと小ギアがゆるみます。

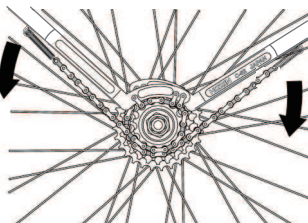


● カセットスプロケットの取り外し

C-62とモンキーレンチ(300mm程度)、フリーホイールリムーバーをご用意ください。

1 カセットロックリングにフリーホイールリムーバーを挿入し、クイックリリースなどで固定します。


2 C-62を裏表に注意して大ギアに、モンキーレンチをフリーホイールリムーバーにセットします。

3 2丁に同じ力をかけて矢印方向に回すと小ギアがゆるみます。

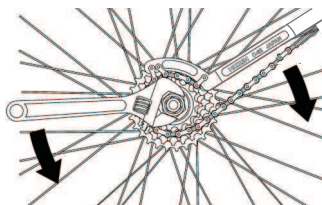

● フリーホイールの取り付け

C-62を図のようにセットし、矢印方向に回します。

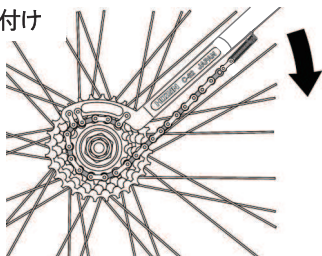

● カセットスプロケットの取り付け

(本器は使用しません。)モンキーレンチを使用し、ロックリングをフリーホイールリムーバーで締め付けます。

■ いずれの場合もC-62を回す方向は、ハンドル側からチェーンの方です。

裏面もご覧ください。



MADE IN JAPAN

ホーザン株式会社

本社 〒556-0021 大阪市浪速区幸町1-2-12

製品・補修部品はWebサイトにてご購入いただけます。
<https://www.hozan.co.jp/>



技術的なお問い合わせ

ホーザンテクニカルホットライン

☎06-6567-3132

E-mail: th@hozan.co.jp

【月曜日から金曜日(祝日を除く)の
10:30~12:00、13:00~17:00】

C-62


SPROCKET REMOVER

Thank you for purchasing the HOZAN C-62 SPROCKET REMOVER. With proper care and handling this fine instrument will provide years of trouble-free operation. Please read this entire instruction manual carefully before attempting to place this instrument in service. Please keep this instruction manual available for reference.

Operation

● Removing a free-wheel


Use 2 of the C-62s. Place the C-62s, ensuring face and back as shown in the illustration. Turn them with equal force in the direction of the arrows to loosen the free-wheel.

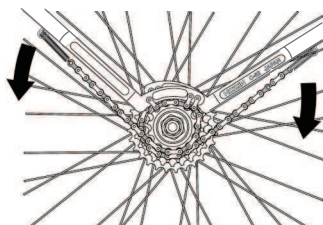

● Removing a cassette sprocket-wheel


Use the C-62 and an adjustable wrench sized approximate 300 mm and a free-wheel remover.

- 1 Insert the free-wheel remover in the cassette lock ring and fix it with a quick release skewer or with a washer and axle nut.
- 2 Place the C-62, ensuring face or back to the low sprocket, and set the adjustable wrench to the free-wheel remover as shown in the illustration.
- 3 Turn them with equal force in the direction of the arrows to loosen the free-wheel.

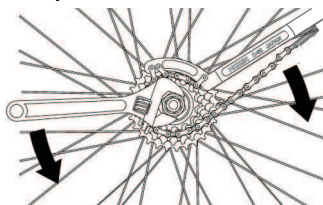

● Resetting a free-wheel

Place the C-62 as shown in the illustration. Turn the tool in the direction of the arrow.

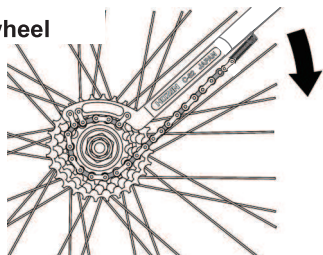

● Resetting a cassette sprocket-wheel

Insert the free-wheel remover in the cassette lock ring and fix it with a quick release skewer or with a washer and axle nut. Tighten the cassette lock ring with the free-wheel remover using an adjustable wrench.

- The C-62 always should be turned in the direction from the handle side to chain side.

Warning and caution symbols

These symbols are used throughout the instruction manual to alert the user to potential safety hazards as follows:

- Warning** ...Notice when incorrect handling could cause the user's death or serious injury.
- Caution** ...Notice when incorrect handling could cause injury to the user or material damage.

Even if the instructions do not have **Caution** mark, there are some possibilities for a serious situation. Follow the instructions.

Precautions

This tool is for removing the hub brake of a bicycle. Do not use for any other purpose.

Caution

1. Do not modify the C-62.
2. Do not use when cracks, breaks, wear or deformation is found on this tool.
3. Do not apply excessive force, such as using tubes as extender handles on this tool.
4. Do not strike with a hammer.

注意文の警告マークについて

この製品情報ではご使用上の注意事項を次のように区別しています。

警告 ...重傷をともなう重大事故の発生を想定してのご注意

注意 ...傷害や物的損害を想定してのご注意

なお、**注意**として記載されていても、あるいは特に記述がなくても、状況によっては重大な結果をまねくおそれがあります。正しく安全にご使用ください。

ご使用上の注意

本器はフリーホイールを取り付け、取り外しする工具です。この目的以外に使用しないでください。

注意

1. 本器を改造しないでください。
2. 本機に割れ、欠け、摩耗、変形などが認められ場合は使用しないでください。
3. ハンドルにパイプなどを継ぎ足して過大な力を加えないでください。
4. ハンマーでたたかないでください。

HOZAN TOOL INDUSTRIAL CO.,LTD.

1-2-12 Saiwaicho, Naniwa-ku, Osaka 556-0021, Japan
https://www.hozan.co.jp/cycle_e/ E-mail: th@hozan.co.jp