

ご使用方法

Cリングの取り外し方法

- 1 変速のための部品やダストシールをハブから取り外します。
- 2 スプロケット（ギヤ板）とハブの勘合のためにある溝を確認し、リムーバー先端をその隙間に挿入します。
- 3 リムーバー先端でCリングを引っ掛け出し、何力所かの溝で同様に作業を行うとCリングが取り外せます。



Cリングが外れた瞬間に飛び出す恐れがありますのでご注意ください。



4962772150856

MADE IN JAPAN

ホーサン株式会社

23.09

HOZZAN

製品情報

C-85


Cリングツールキット

本品は自転車の後輪のスプロケット（ギヤ板）を固定しているCリングを取り外し、取り付けを行うための工具キットです。

各部の名称と入組明細

リムーバー

セッター

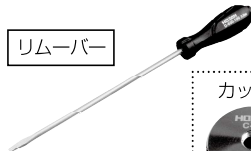

カップ部

コーン部




ご使用方法

Cリングの取り付け方法

- 1** 本器にCリングを取り付けます。テーブルなどの上にコーン部を置き、Cリングを乗せます。



その上からカップ部をかぶせ、カップ部を押しつけながら、Cリングをコーン部のすそ部分へ移動させます。

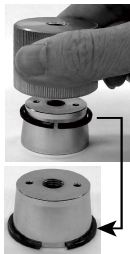

⚠ 注意


本器にCリングを取り付ける作業は、必ずテーブルなどの上で行ってください。ハブ軸に本器を取り付けながら行くと、スムーズに作業が行えず、またハブ軸や本器を破損させる恐れがあります。

- 2** スプロケットをハブに装着します。

- 3** Cリングが取り付けられた状態のコーン部をハブ軸のネジに取り付け、コーン部の端面がハブ本体に接するまでねじ込みます。



- 4** コーン部の上から、カップ部をハブ軸のネジにねじ込みます。Cリングが設置されるまでカップ部をねじ込んでいきます。途中、ハブとコーン部の段差にCリングが落ち込む場合がありますが、そのままカップをねじ込んでいってください。

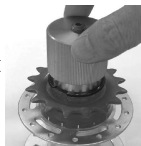

- 5** 所定の位置にCリングが収まれば取り付け完了です。カップ部とコーン部をハブ軸から取り外してください。コーン部が取り外しにくい場合は、ピンスパナを使用してください。

HOZZAN


C-85

SPROCKET SNAP RING TOOL KIT

This is a tool kit for removing and installing snap rings which are securing the sprocket of bicycle rear wheel.

INSTRUCTION MANUAL

Identification of parts and contents

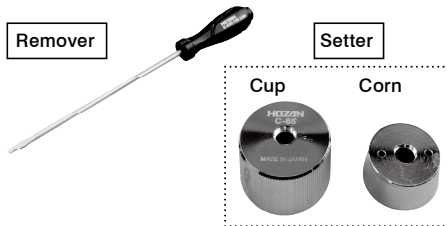

Operation

How to remove snap ring

- 1 Disassemble the derailleur parts and dust seal from the hub.
- 2 Inset the tip of the remover into the notch for engagement of the sprocket and the hub.

- 3 Hook the snap ring and take out it. Work similarly at some notches to remove the snap ring.

The snap ring could spring out suddenly. Pay attention not to be injured.




How to install snap ring

- 1** First, put a snap ring onto the Corn. Do on the work bench.



Push snap ring to the bottom with the cup.

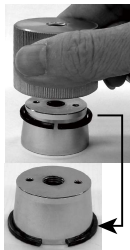

Caution


Certainly do this work on the work bench. Otherwise, the hub or the tool could be damaged.

- 2** Put the sprocket on the hub.

- 3** Screw the corn with the snap ring into the hub axle until the bottom face of the corn reaches the hub.



- 4** Screw the cup over the corn into the axle. Turn clockwise the cup to move the snap ring to the end. Please go on even if the snap ring falls into the gap between the hub and the corn on the way.

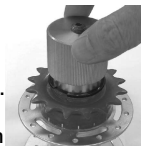

- 5** Installation is completed when the snap ring fits to the correct groove. Remove the tools from the axle. If it is hard to remove the corn, use a pin spanner.

HOZAN TOOL INDUSTRIAL CO.,LTD.

1-2-12 Saiwaicho, Naniwa-ku, Osaka 556-0021, Japan
https://www.hozan.co.jp/cycle_e/ E-mail : th@hozan.co.jp